
## GenX-3 Wiring/Schematic Diagrams & Pinout Tables

#### Applies to HW 303Axx/303Gxx only





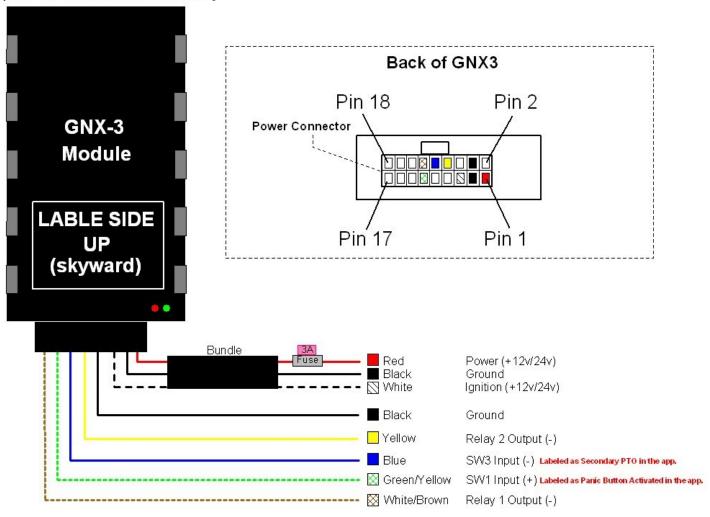

For more detailed installation information, including pictures, go to: www.rhinofleettracking.com/install




# GenX-3 Wiring/Schematic Diagrams & Pinout Tables

### Please refer to Pg. 1 "Back of GNX3" diagram

### **Power Connector**

Pin	Harness Wire Color	Description
1	Red (Bundle)	Power input (+8v to +30v constant)
2	-	NOT USED
3	Black (Bundle)	Ground
4	Black	Ground
5	-	LED output (+20mA max)
6	-	NOT USED
7	White (Bundle)	Ignition input (+)
8	Yellow	Relay 2 output (-)
9	-	MFG Test/Prog (DO NOT CONNECT)
10	Blue	Switch 3 input (-) Labeled as Secondary PTO in the app.
11	Green/Yellow	Switch 1 input (+) Labeled as Panic Button Activated in the app.
12	White/Brown	Relay 1 output (-)
13	-	NOT USED
14	-	NOT USED
15	-	Ground
16	-	NOT USED
17	-	RxD (RS-232 input)
18	-	TxD (RS-232 output)



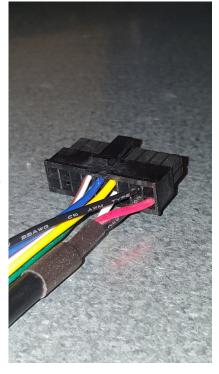





For more detailed installation information, including pictures, go to: www.rhinofleettracking.com/install

